

## Adjusting level indicator

1. Remove the top part.
2. Loosen the 3 screws holding the console.



3. Remove the switch on the circuit board.




4. Remove the level indicator.




5. To adjust the length of the rod, carefully pull it apart on each side of the hose as in the picture.

The total length of the axel need to be 190-195mm

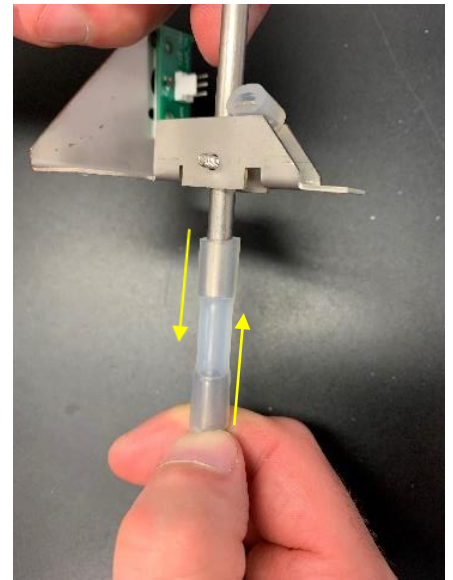

Please not! You cannot stretch the silicone hose in order to lengthen it, you need to pull the rods out of the hose .

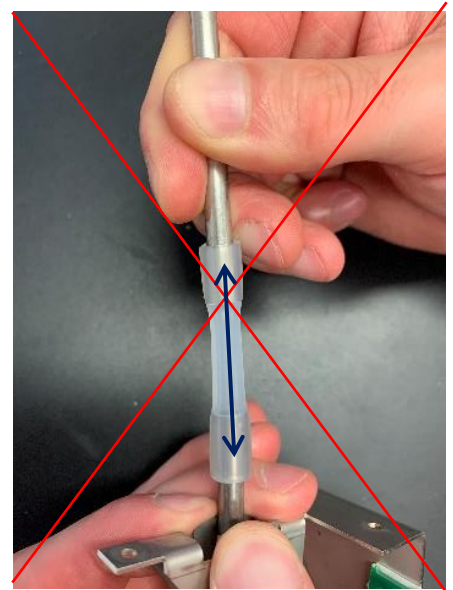

6. Re-attach the switch to the circuit board.



7. Test