



Replace magnet sensor for seat ai.


1. Unplug the toilet and remove top-part.
2. Locate the sensor. Mounted underneath the bracket.

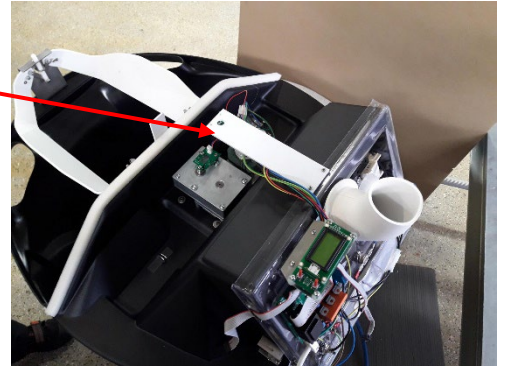

3. Disconnect the contact on the circuit board (sensor).

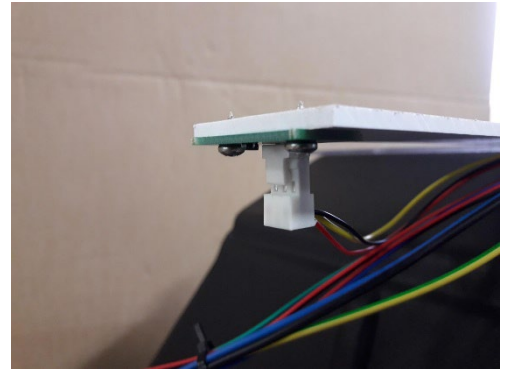

4. Unfasten the bracket and turn it upside down and unfasten the old circuit board (sensor).

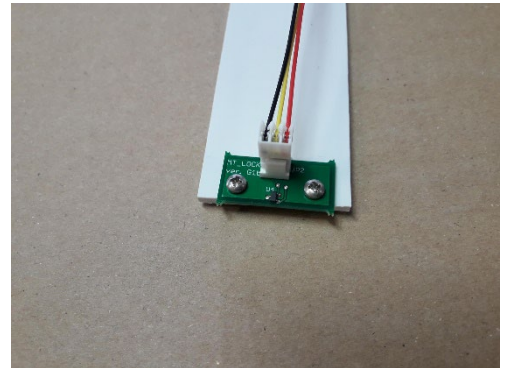

5. Fasten the new circuit board and mount everything in reversed order.
6. After this is done, enter the service mode in display and check that the magnet activates the new sensor.