

Replacing double action humus cover

Tools: Screwdriver Philips 2, Screwdriver slotted medium size.

Spareparts: Humus Cover, Foam gasket


Remove the Philips screw in the back of the toilet.



Remove the fastening in the front with a slotted screwdriver.




Remove the top part of the toilet

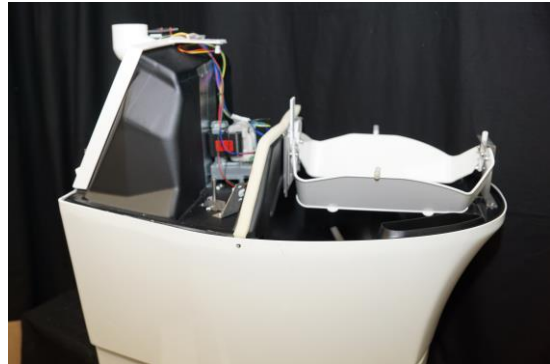

Remove the 2 screws holding the front bracket



Remove the torxscrew (T15) in the center of the rear bracket. It's partly covered by the foam gasket. Try to avoid damaging the gasket.

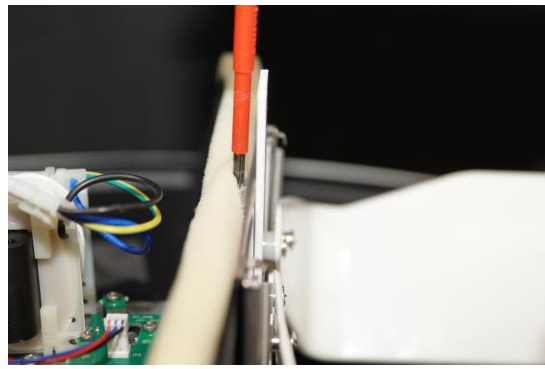

Remove the complete humus cover.



Put the new cover in place and mount it in the reverse order. If needed replace the foam gasket.

Make a functioning test and put the top part back.